


EUROFIT BANNER INSTRUCTIONS

Product Parts

- 1 - Top Corner Pole (x2)
- 2 - Top Horizontal Pole
- 3 - Vertical Pole (x2)
- 4 - Fabric Graphic
- 5 - Horizontal Middle Pole
- 6 - Base

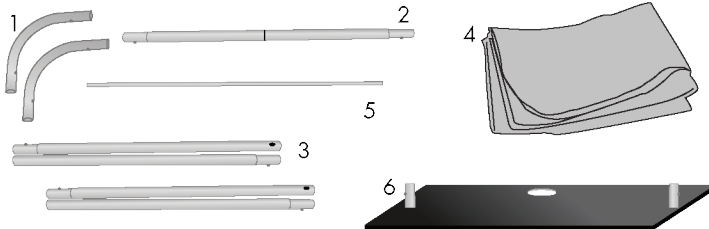

Display Set-Up

Step 1

Begin by removing all parts from the carry case and place on a clean, flat surface.

Step 2

Assemble the two Vertical Poles (3) by placing the tapered end of one pole into the large end of the next while pressing the snap button as shown.


Step 3

Attach both of the Vertical Poles (3) into the ports on the Base (6).




Step 4

Insert ends of Horizontal Middle Pole (5) through both sides of the Vertical Poles (3). This Pole will be smaller in diameter than all other poles provided.

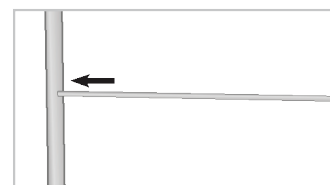


Step 5

Attach the Top Corner Poles (1) and Top Horizontal Pole (2) to the Vertical Poles (3) as shown.

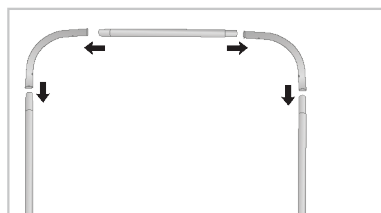

Step 6

Slide Graphic (4) over the top of the display as shown.

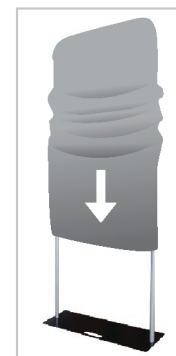

Storage & Care

Place all product parts into Carry Case and store in a cool dry location. Recommended for indoor use only. Machine wash on gentle cycle using mild detergent. Tumble Dry No Heat. Do NOT dry clean, Do NOT Iron.